

Note:

1. Do not scale drawing.
2. Dimensions given in inches (mm).
3. Minimum backset or reveal of door is 1-5/8" (41.3)

**180 x 102 Top Pivot
For Deep Reveal**

RIXSON®
ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER



IS-180 x 102

DATE

07-09


180 x 102 Top Pivot

Location

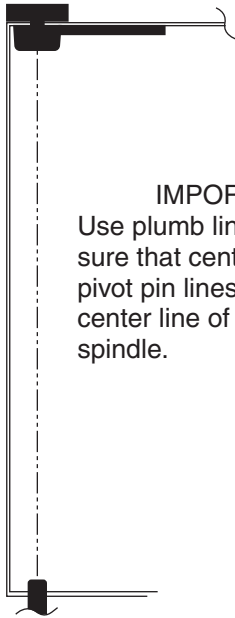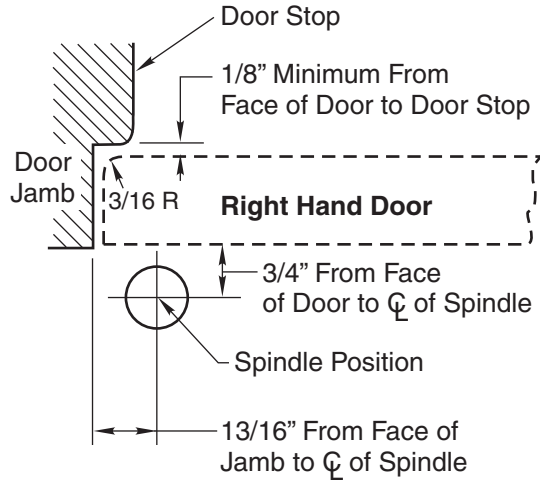


IMPORTANT:
 Use plumb line to make sure that center line of top pivot pin lines up with center line of closer/pivot spindle.

Attachment

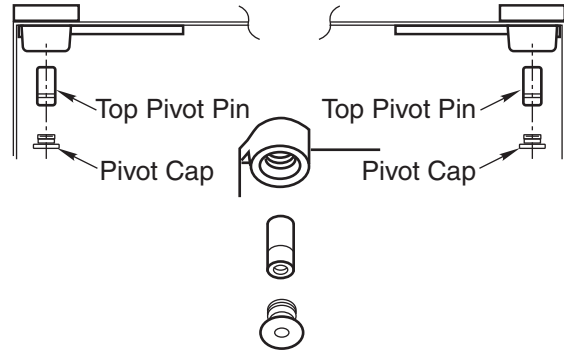

1. Attach door leaf of top pivot to door.
2. Attach jamb leaf of top pivot to frame.
3. If side jamb pivot is used, see required template for instructions.
4. Push top pivot pin into place. Tighten set screw.
5. Attach pivot cap. CAP MUST BE TIGHTENED SECURELY.

How To Determine Hand of Door

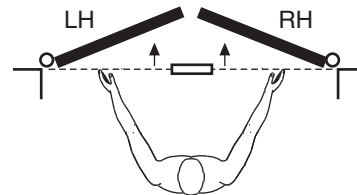

Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

**180 x 102 Top Pivot
 For Deep Reveal**

RIXSON®
ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

IS-180 x 102

DATE

07-09