



External Call Annunciation with IER-2

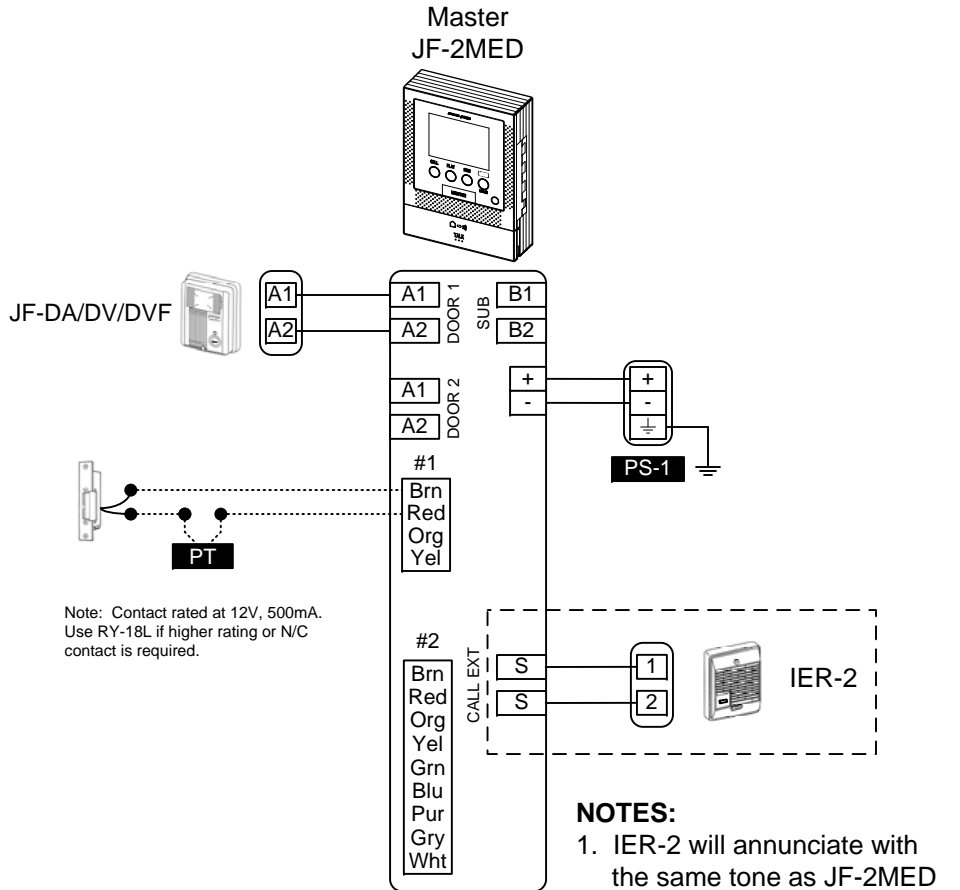

- NOTES:**
1. IER-2 will annunciate with the same tone as JF-2MED Master station.
 2. A maximum of (2) IER-2 may be used in parallel.
 3. All other connections typical per QuikDraw diagram issued, main page.

External Signaling with RY-ES

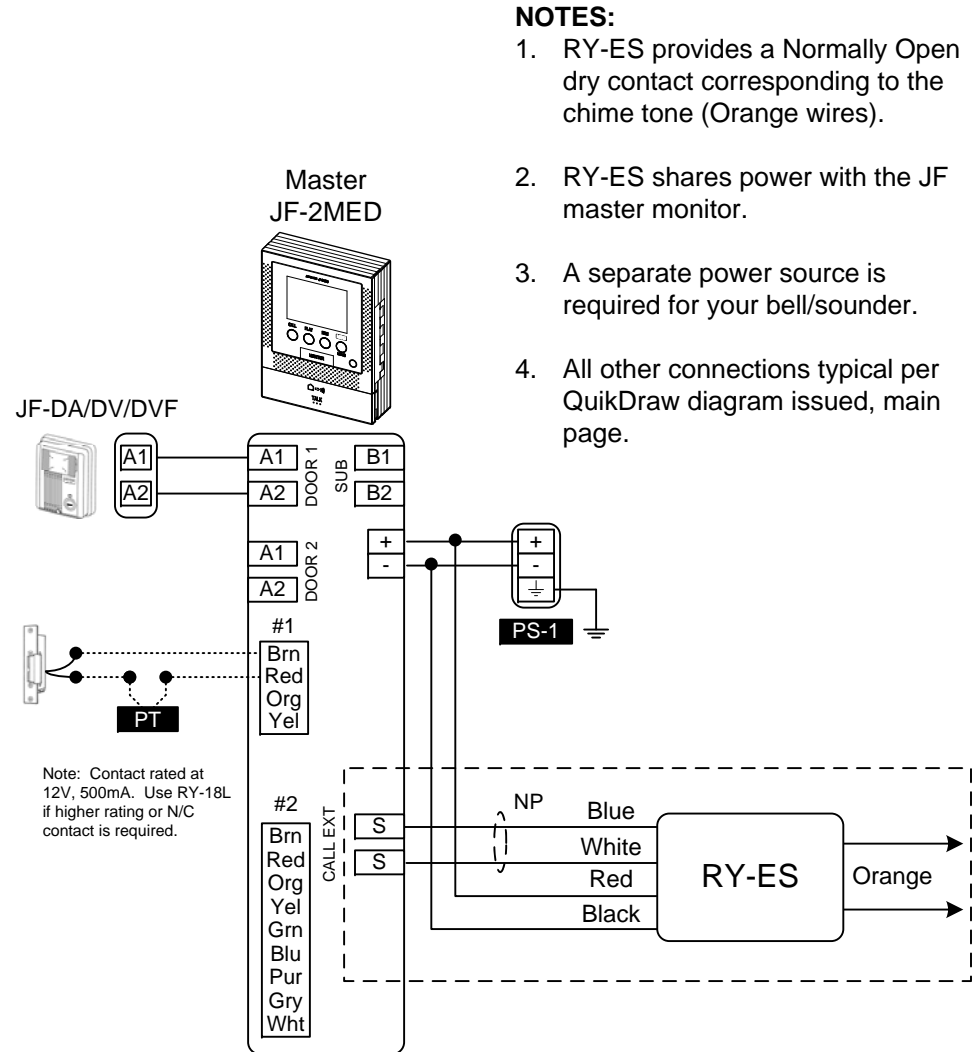

- NOTES:**
1. RY-ES provides a Normally Open dry contact corresponding to the chime tone (Orange wires).
 2. RY-ES shares power with the JF master monitor.
 3. A separate power source is required for your bell/sounder.
 4. All other connections typical per QuikDraw diagram issued, main page.